

## CONTROLLER SETTINGS

The following tables refer to boiler settings with the Tigra or Negros controller (with manual setting of boiler and burner parameters). Eco-pea coal or pellet fired with a standard multi-fuel Eko-pal drive with a screw speed of -1 rpm.

In case of boilers with 2.1 rpm and 3 rpm drive, the "delivery time" should be divided by 2 or 3 respectively, while other parameters of the controller's settings remain unchanged.

**Note:** before you configure the controller, read the rpm information from the motor. - (1 rpm) or (2.1 rpm).

**Note:** All our boilers up to 30 kW can be equipped with the 1 and 2.1 rpm drive depending on order. Only high-power boilers (75 kW - 100 kW) can be equipped with a drive of screw speed of 3, 4, 5 rpm and then the controller settings are individually selected for each boiler.

### Fuel: Pellet

Boiler power		12 kW	15 kW	19 kW	25 kW	30 kW
Feed time	s	16/18	16/18	16/20	18/23	18/30
Inter-feed time	s	70/90	70/90	70/90	70/90	70/90
Blower speed	%	30/40	30/40	30/40	30/40	30/40
Fuel feed multiple		1	1	1	1	1
Blow time	s	5	5	5	5	5
Inter-blow interval	mm	8/10	8/10	8/10	8/10	8/10
Blower speed at standby	%	50	50	50	50	50



P.W. Stalkot

Adres: 63-304 Czermin, ul. Broniszewice 15  
 Tel: (62) 741 64 58 / Fax: 62 741 64 58 / Kom.: 604 814 414  
 E-mail: biuro@stalkot.pl

WWW.STALKOT.PL